



Blade® 350 QX 2.0 Firmware 2.0 Agility Mode Instructions

Accessing Agility Mode

To access Agility Mode, a Spektrum DX6i or higher transmitter is required. On your transmitter's flight mode channel (channel 5), adjust one of the endpoints (high or low) from 100% to 120%. If you adjust the high endpoint, Smart Mode will be replaced by Agility Mode. If you adjust the low endpoint, Stability Mode will be replaced by Agility Mode. To return to normal operation, return the endpoint to 100%.

Agility Mode

- Solid Red LED Indicator
- Aerobatic: Capable of flips and rolls
- Throttle provides proportional thrust: The throttle responds directly to the throttle input, giving the pilot direct control over hovering as well as ascent and descent rates.

For complete Agility Mode information, refer to the Blade 350 QX Firmware 1.0 full manual online at www.horizonhobby.com.